User Manual (en)

Expansion Module

tiptel KD 40-30

tiptel

Table of Content

Table of Content 3
Safety notes 5
Getting Started 7
Packing List 7
Expansion Module Installation 9
1. Connect the expansion module and IP Phone 9
2. Attach the Foot stand 10
3. Connect the IP Phone and Power 10
Getting Familiar with Expansion Module 11
Hardware Components Preview 11
Icon Preview 12
Features Configuration 14
Line 14
Speed Dial 14
BLF 15
Voice Mail 16
Direct Pickup 16
Group Pickup 17
Call Park 17
Intercom 18
DTMF 18
Prefix 19
Local Group 19
XML Group 20
LDAP 20
XML Browser 21
Broadsoft Group 22
Conference 22
Forward 23
Transfer 23
Hold 24
Group Listening 24
DND 24
Redial 25
Call Return 25
SMS 26
Record 26
Paging 27
Shared Line 27
Public Hold 28

Private Hold 28
Upgrade 30
Appendix 32
Warranty 32
Guarantee 32
Declaration of conformity 32
Disposal 32

Safety notes

- You may not set-up and use this device in the following surroundings:
    - Outdoors
    - In damp or wet spaces (bath, shower, swimming pool, etc.)
    - In hazardous environments
    - In locations exposed to direct sunlight
    - At ambient temperatures below 0 °C or above 40 °C
    - In case of strong vibrations or shocks
    - In dusty environments
- Only use a soft, damp cloth to clean the device. Do not use chemicals or abrasive cleaners.
- During a thunder storm you should neither phone nor connect or disconnect any lines (electrical shock hazard in case of a lightning strike)
- Opening the device and conducting improper repairs may hazard the user.
- Disposal of this device must be carried out according to local regulations.
- Please note that in case of mains outage emergency calls cannot be placed.
- Only such devices may be connected to the phone, which deliver safety extra low voltage (SELV).
- Only headsets with integrated volume limiter for hearing protection according to EN 60950 may be used.
- Make sure that the connecting lines are installed carefully so that no one can trip over the cable. Connected cables must not be bent excessively or subjected to mechanical strain.
- Connecting cables must be wired inside buildings only (Danger of electrical shock due to transients).
- In case of malfunctions disconnect power cord and all communication lines.
- Before opening the device, unplug any communication lines.
- In case of operating the device with external AC adapter:
- Only the original AC adapter (Article-No. 3054051) may be used (Danger of electrical shock and/or fire)
- The AC adapter must be easily accessible so that it can be removed from the wall outlet any time in case of danger.
- In case of malfunction remove the AC adapter from the wall outlet and disconnect any communication lines.

- Before opening the device remove the AC adapter from the wall outlet and disconnect any communication lines.
- The device, AC adapter (inclusive, has been developed and manufactured in compliance with Standard EN 60950 "Safety of information technology equipment".
- Any changes or modifications not expressly approved by the manufacturer can void the user's authority to operate the equipment.

Getting Started

Packing List

The package contains the following parts, please check if all the items are not missed:

1. The Expansion module device

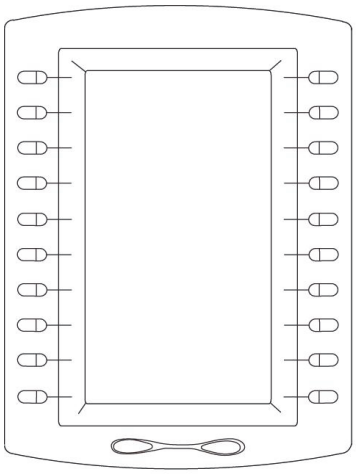

2. The Stand

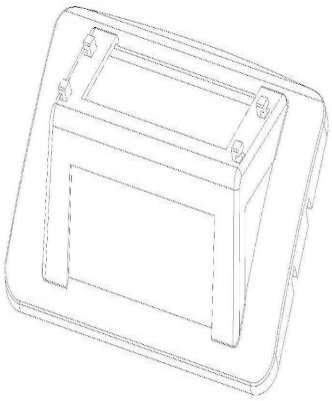

3. Connecting Sheet

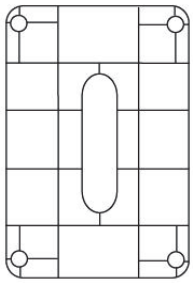

4. Power adapter

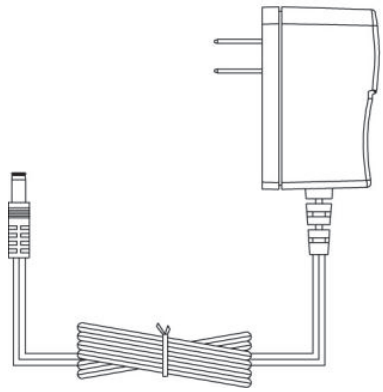

5. Ethernet cable/Connecting Cord

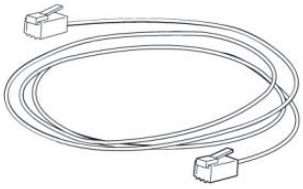

6. Screws

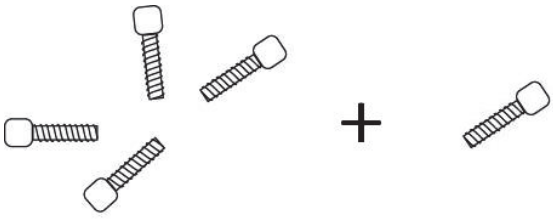

7. Quick installation reference

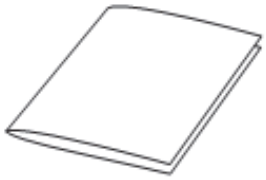

Expansion Module Installation

1. Connect the expansion module and IP Phone

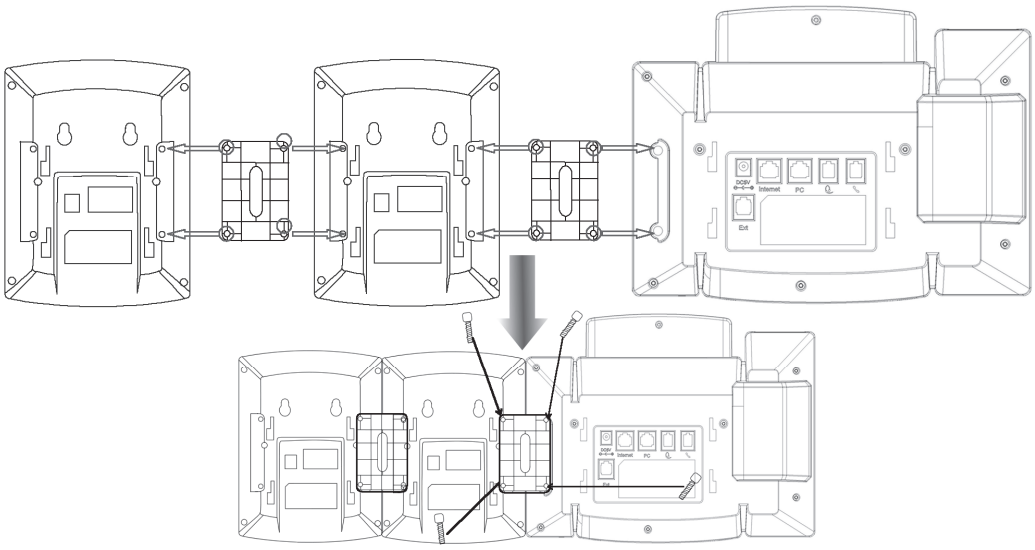

2. Attach the Foot stand

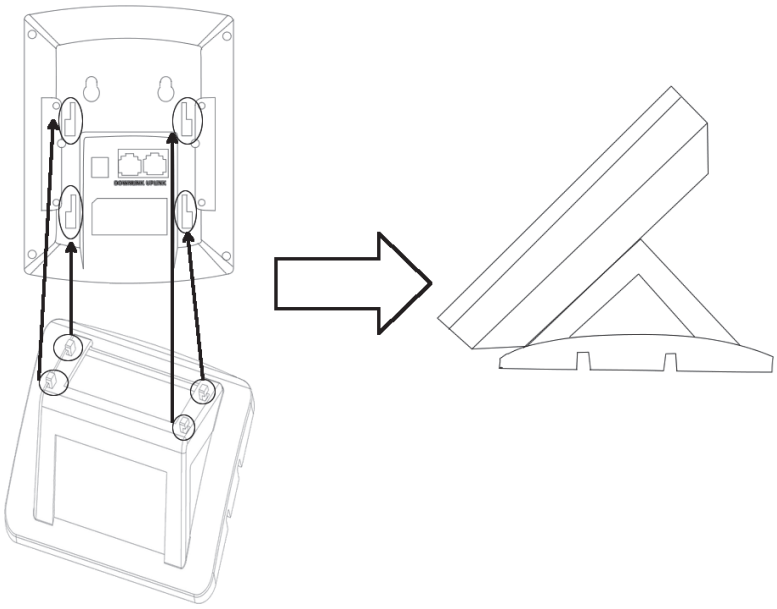

3. Connect the IP Phone and Power

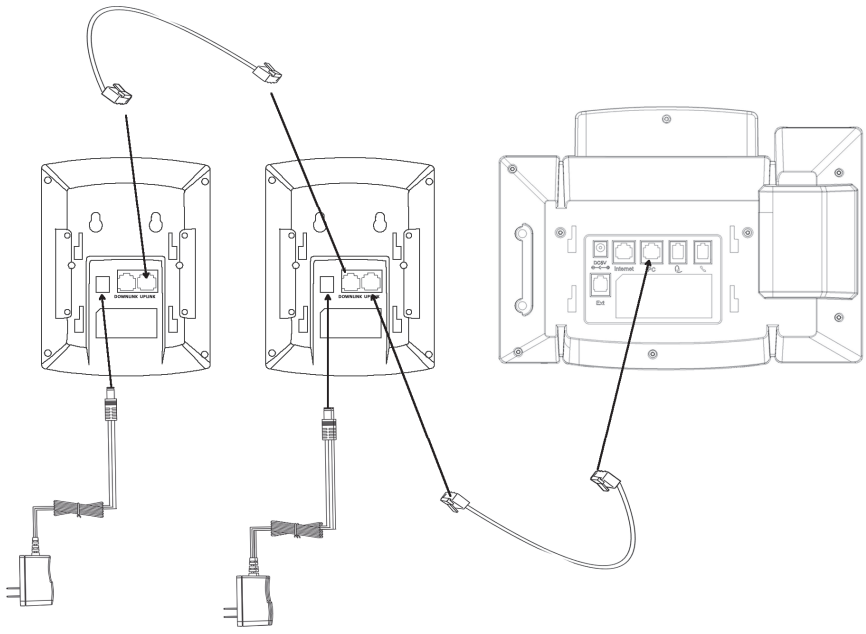

Note：
The IP phone tiptel 3030 series can support up to six expansion modules.

Getting Familiar with Expansion Module

Hardware Components Preview

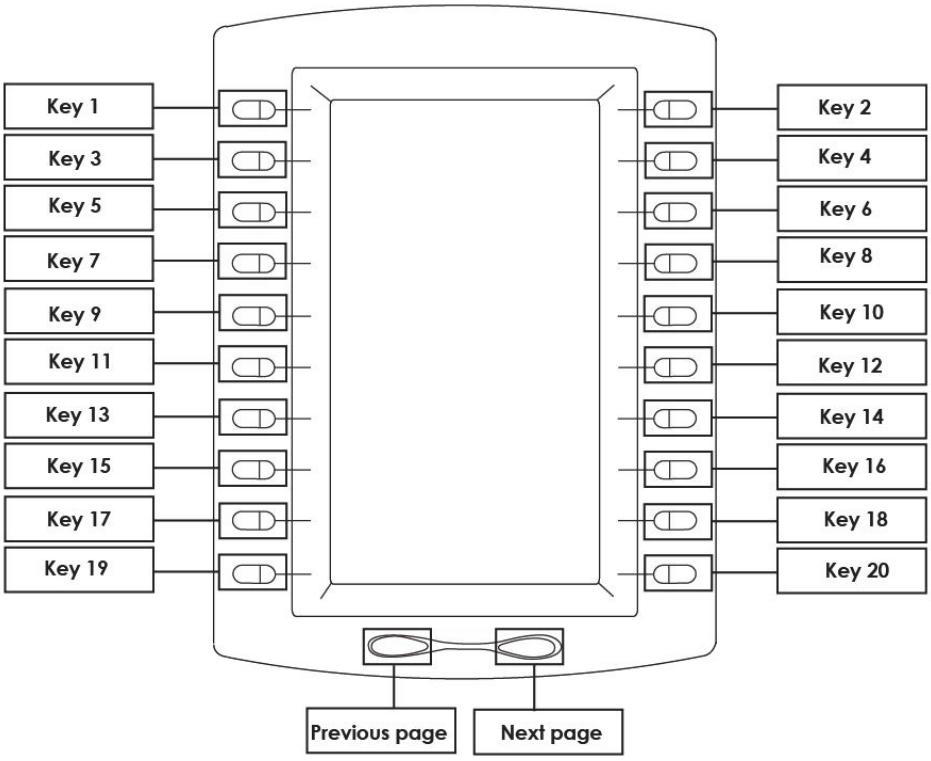

Icon Preview

Icon	Description
	Line(Registered succeed)
	Line (Unregistered)
	Line(Ringing)
	Speed Dial
	BLF
	BLF(Ringing)
	BLF(Talking)
	Voice messages
	Pick up
	Call Park
	Intercom/Paging
	DTMF
	Prefix
	XML Group
	Local Group

	XML Browser

	LDAP
	Broadsoft Group
	Conference
	Forward
	Transfer
	Hold
	Line on Hold
	DND
	Redial
	Call Return
	SMS
	Record
	Recording
	Group Listening
	Shared Line
	Other Functions

Features Configuration

Line

It works same as Line keys.

To configure Line Feature via Web Interface

1. Click Function keys →EXP Key.
2. Select the wanted Key and set as Line.
3. Select the Account.
4. Click the SaveSet to save the configuration.

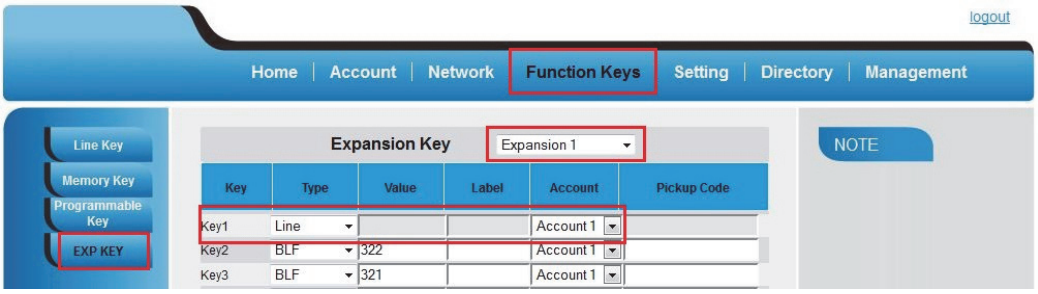

Speed Dial

With this feature, you can dial one directory by press the definite key.

To configure Speed Dial feature via Web Interface

1. Click Function keys →EXP Key.
2. Select the wanted Key and set as Speed Dial.
3. Enter the desired phone number in the Value field.
4. Filled the Label displayed on LCD
5. Select the Account.
6. Click the SaveSet to save the configuration.

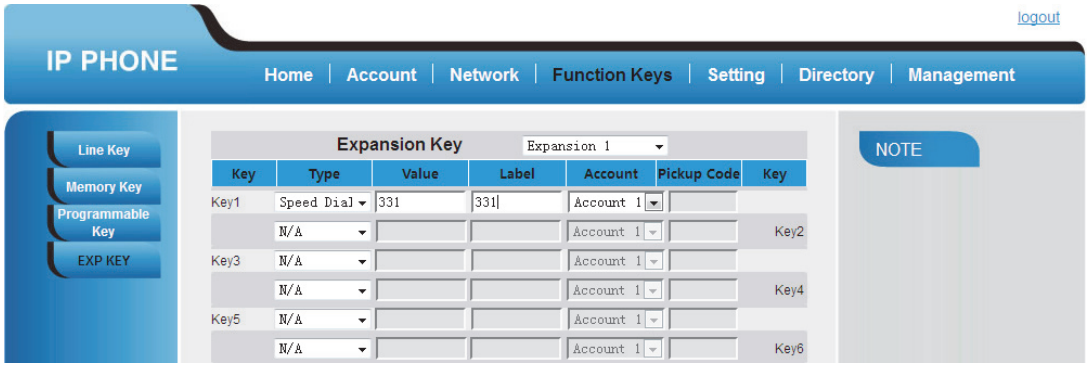

BLF

You can use the BLF (Busy Lamp Field) feature to monitor a specific one whether his phone is busy or free.

1. When the monitored line is idle, the light is steady green.
2. When the monitored line is ringing, the light is blinking red, press the BLF key to pick the phone up directly.
3. When the monitored line is calling or in a conversation, the light is steady red.

To configure a BLF key by web

1. Click Function keys → EXP Key.
2. Select the desired Key and select BLF in the Type.
3. Enter the monitored phone number in the Value field.
4. Filled the Label displayed on LCD.
5. Select the Account.
6. Filled the Pickup code.
7. Click the SaveSet to save the configuration and then restart.

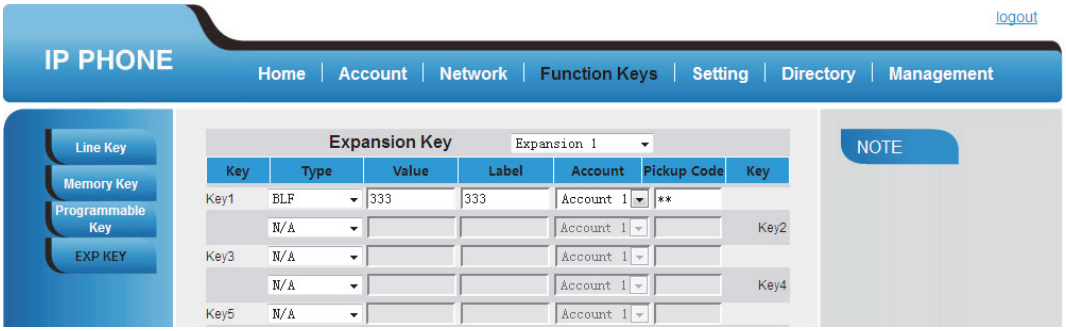

Note:
This feature is not available on all servers. For more information, contact your system

administrator.
In the Web interface, you can also active the pickup function(Setting->Features->Call Pickup) and set the pickup code. For example, if you set the BLF value as 333, and the pickup code is **, then when there is an incoming call to 333, press the BLF key, it will call out the ** automatically to pickup the incoming call on 333.

Voice Mail

To configure Voice Mail feature via Web Interface

1. Click Function keys → EXP Key.
2. Select the wanted Key.
3. Enter the desired voicemail feature codes in the Value field.
4. Filled the Label displayed on LCD.
5. Select the Account.
6. Click the SaveSet to save the configuration.

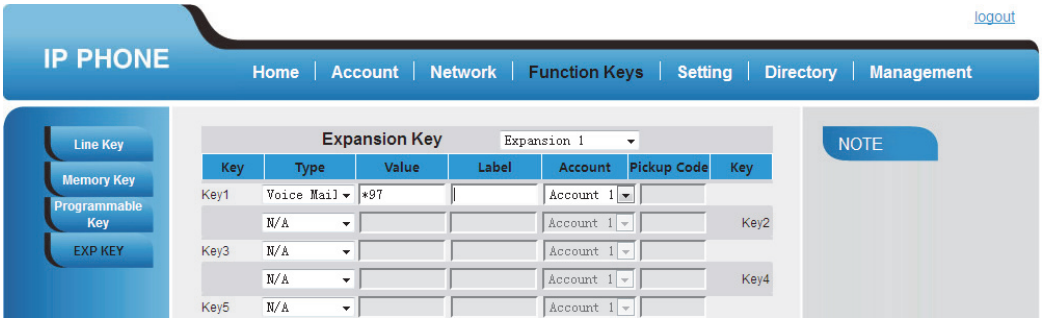

Direct Pickup

With this feature, you can pick up the set line when it ringing.

To configure Direct Pickup feature via Web Interface

1. Click Function keys → EXP Key..
2. Select the wanted Key and set as Direct Pickup.
3. Enter the pickup code and followed the desired phone number in the Value field.
4. Filled the Label displayed on LCD.
5. Select the Account.
6. Click the SaveSet to save the configuration.

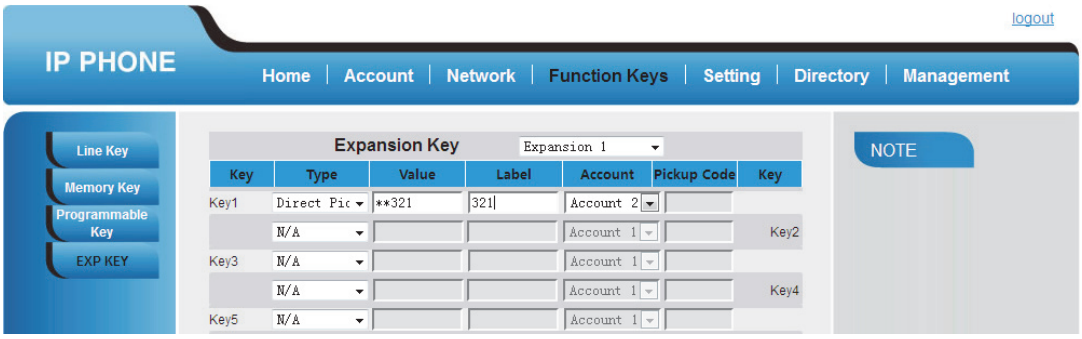
logout
IP PHONE
Home | Account | Network | Function Keys | Setting | Directory | Management
Line Key
Memory Key
Programmable Key
EXP KEY
Expansion Key
Expansion 1
Key | Type | Value | Label | Account | Pickup Code | Key
Key1 | Direct Pic | **321 | 321 | Account 2
N/A | Account 1 | Key2
Key3 | N/A | Account 1
N/A | Account 1 | Key4
Key5 | N/A | Account 1
NOTE

Group Pickup

With this feature, you can pick up the specified group that you want incoming calls.

To configure the Group Pick up via Web interface

1. Click Function keys → EXP Key.
2. Select the desired Key and select Group Pickup in the Type.
3. Enter the pickup code and followed the desired Group number in the Value field.
4. Filled the Label displayed on LCD..
5. Click the SaveSet to save the configuration.

Call Park

With this feature, you can put a call on hold and continue the conversation from another phone.

To configure the Call Park via Web interface

1. Click Function key → EXP Key.
2. Select the desired Key and select Call Park in the Type.
3. Enter the park feature codes in the value field.
4. Filled the Label displayed on LCD.
5. Select the Account.
6. Click the SaveSet to save the configuration.

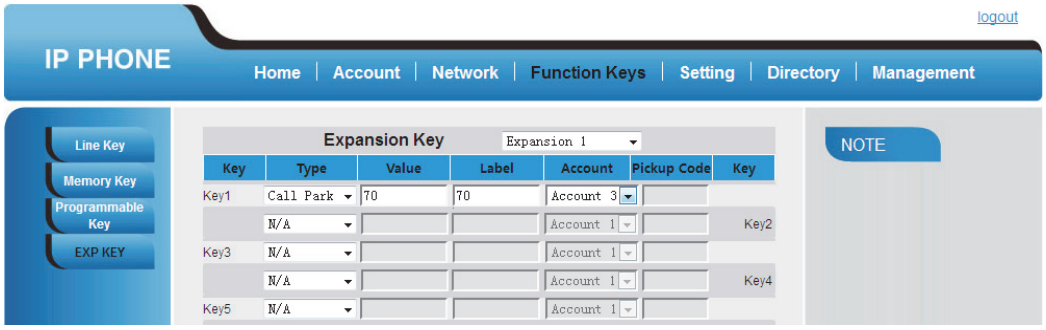
logout
IP PHONE
Home | Account | Network | Function Keys | Setting | Directory | Management
Line Key
Memory Key
Programmable Key
EXP KEY
Expansion Key
Expansion 1
Key | Type | Value | Label | Account | Pickup Code | Key
Key1 Call Park 70 70 Account 3
N/A Account 1 Key2
Key3 N/A Account 1
N/A Account 1 Key4
Key5 N/A Account 1
NOTE

Note:
Your VoIP PBX must support this feature and enable this feature.

Intercom

When use the intercom feature, you can quickly get access connect to the configured EXPension.

To configure Intercom feature via Web Interface

1. Click Function keys → EXP Key.
2. Select the wanted Key and select Intercom as the Type.
3. Enter the intercom codes followed by desired number in the Value field.
4. Filled the Label displayed on LCD.
5. Select the Account.
6. Click the SaveSet to save the configuration.

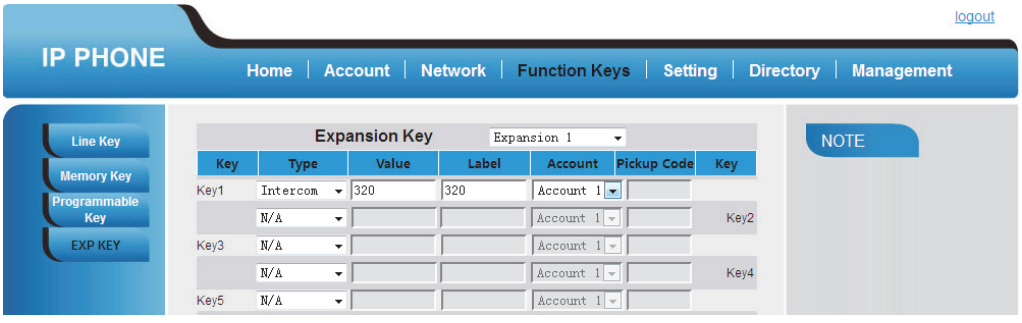
logout
IP PHONE
Home | Account | Network | Function Keys | Setting | Directory | Management
Line Key
Memory Key
Programmable Key
EXP KEY
Expansion Key
Expansion 1
Key | Type | Value | Label | Account | Pickup Code | Key
Key1 Intercom 320 320 Account 1
N/A Account 1 Key2
Key3 N/A Account 1
N/A Account 1 Key4
Key5 N/A Account 1
NOTE

Note:
This feature is not available on all servers. For more information, contact your system administrator, And make sure the intercom EXPension enables the Auto-answer function.

DTMF

When the key is configured as DTMF key, You are allowed to send out the desired DTMF number during the conversation.

To configure the DTMF via Web interface

1. Click Function keys → EXP Key.
2. Select the desired Key and select DTMF in the Type.
3. Fill the value with the Desired DTMF number
4. Enter the Label displayed on LCD.
5. Click the SaveSet to save the configuration.

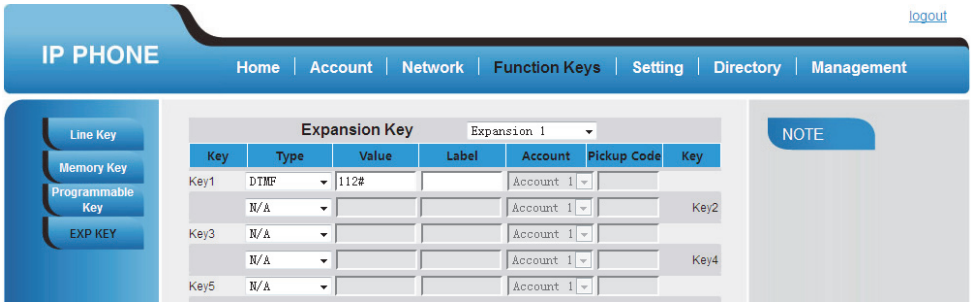

Prefix

If the key is configured as Prefix key, you can set the number prefix (e.g. Before the number plus 9), then you don't input 9, press the key and 9 will display on the LCD interface.

To configure the Prefix via Web interface

1. Click Function key → EXP Key.
2. Select the desired Key and select Prefix in the Type.
3. Fill the value with number that you want to set as prefix
4. Enter Label displayed on LCD.
5. Click the SaveSet to save the configuration.

Then when you press this key, the set value is input directly.

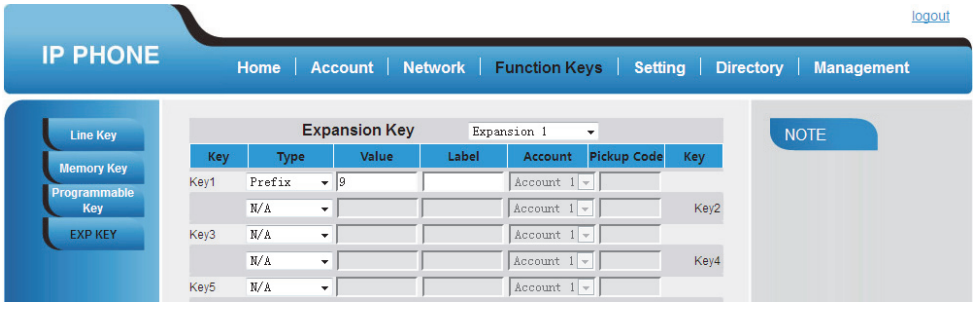

Local Group

When use the Local Group feature, press the key and enter the local Contacts interface quickly.

To configure the Local Group via Web interface

1. Click Function key → EXP Key.
2. Select the desired Key and select Local group in the Type.
3. Filled the Label displayed on LCD.
4. Click the SaveSet to save the configuration.

Then you can press the local group key to access the pre-defined contact group in the local directory quickly.

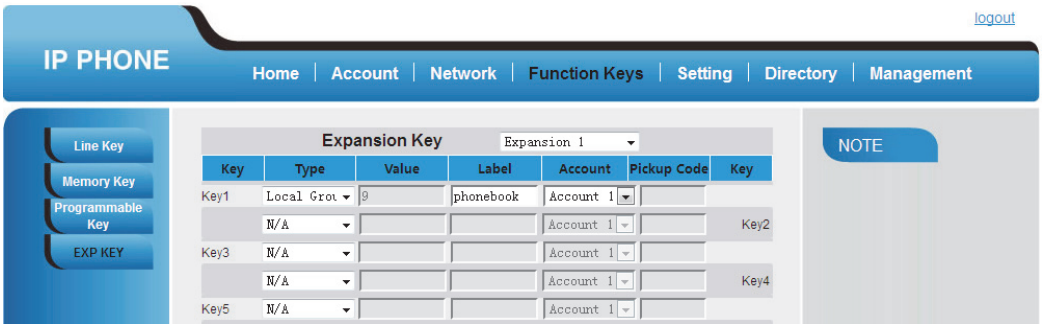
logout
IP PHONE
Home | Account | Network | Function Keys | Setting | Directory | Management
Line Key
Memory Key
Programmable Key
EXP KEY
Expansion Key
Expansion 1
Key | Type | Value | Label | Account | Pickup Code | Key
Key1 | Local Grou | 9 | phonebook | Account 1
N/A | Account 1 | Key2
Key3 | N/A | Account 1
N/A | Account 1 | Key4
Key5 | N/A | Account 1
NOTE

XML Group

When use the XML Group feature,press the key and enter the Remote Contacts interface quickly.

To configure the Local Group via Web interface

1. Click Function key → EXP Key.
2. Select the desired Key and select XML group in the Type.
3. Filled the Label displayed on LCD.
4. Click the SaveSet to save the configuration.

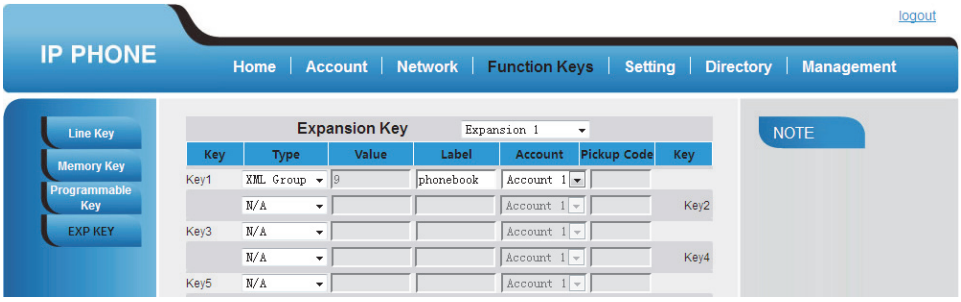
logout
IP PHONE
Home | Account | Network | Function Keys | Setting | Directory | Management
Line Key
Memory Key
Programmable Key
EXP KEY
Expansion Key
Expansion 1
Key | Type | Value | Label | Account | Pickup Code | Key
Key1 | XML Group | 9 | phonebook | Account 1
N/A | Account 1 | Key2
Key3 | N/A | Account 1
N/A | Account 1 | Key4
Key5 | N/A | Account 1
NOTE

LDAP

When use the LDAP feature, you can get the LDAP Phonebook directly.

To configure the LDAP via Web interface

1. Click Function key → EXP Key.
2. Select the desired Key and select LDAP in the Type.
3. Filled the Label displayed on LCD.
4. Click the SaveSet to save the configuration.

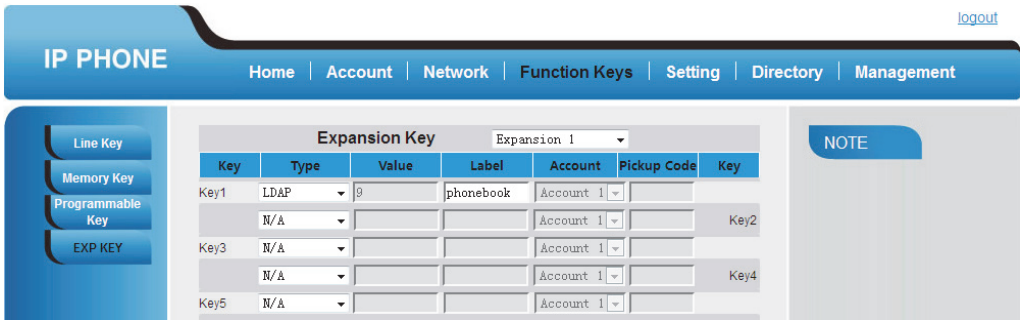

XML Browser

To configure the XML Browser via Web interface

1. Click Function key → EXP Key.
2. Select the desired Key and select xml browser in the Type.
3. Filled the value and Label.
4. Click the SaveSet to save the configuration.

Broadsoft Group

When use the BroadSoft Group feature,press the key and enter the Remote Contacts interface quickly.

To configure the Broadsoft group via Web interface

1. Click Function key → EXP Key.
2. Select the desired Key and select Broadsoft group in the Type.
3. Filled the Label displayed on LCD.
4. Click the SaveSet to save the configuration.

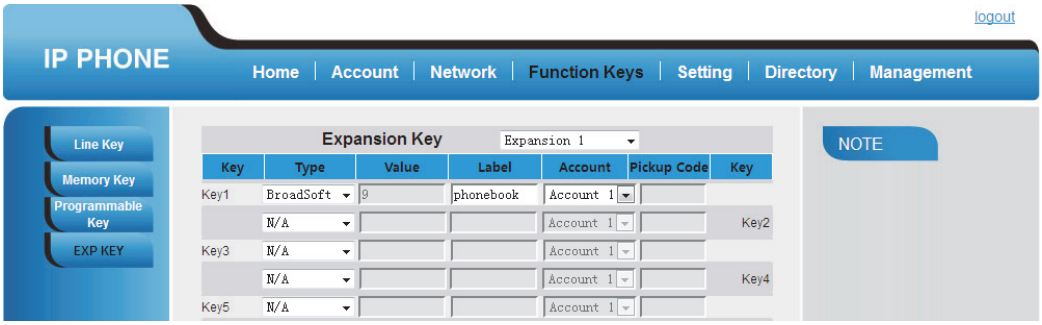
logout
IP PHONE
Home | Account | Network | Function Keys | Setting | Directory | Management
Line Key
Memory Key
Programmable Key
EXP KEY
Expansion Key
Expansion 1
Key | Type | Value | Label | Account | Pickup Code | Key
Key1 | BroadSoft | 9 | phonebook | Account 1
N/A | Account 1 | Key2
Key3 | N/A | Account 1
N/A | Account 1 | Key4
Key5 | N/A | Account 1
NOTE

Conference

The IP Phone supports up to 5-way conference. You are allowed to configure the programmable key to be used as a conference key.

To configure Conference via Web Interface

1. Click Function keys →EXP Key.
2. Select the desired Key and select Conference in the Type.
3. Enter the Label displayed on LCD.
4. Click the SaveSet to save the configuration.

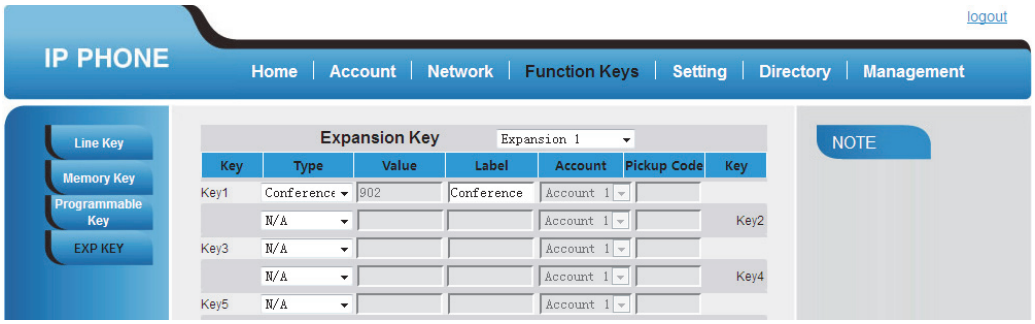
logout
IP PHONE
Home | Account | Network | Function Keys | Setting | Directory | Management
Line Key
Memory Key
Programmable Key
EXP KEY
Expansion Key
Expansion 1
Key | Type | Value | Label | Account | Pickup Code | Key
Key1 | Conference | 902 | Conference | Account 1
N/A | Account 1 | Key2
Key3 | N/A | Account 1
N/A | Account 1 | Key4
Key5 | N/A | Account 1
NOTE

Forward

If the key is configured as Forward key, press this key under the idle status, the IP phone will turn to the Always Forward interface and you can set the Forward to number, then when there is any call to the EXPension number will be forwarded to the set number automatically.

To configure Forward via Web Interface

1. Click Function keys →EXP Key.
2. Select the desired Key and select Forward in the Type.
3. Enter the Value with the number you want to forward
4. Enter the Label displayed on LCD.
5. Click the SaveSet to save the configuration.

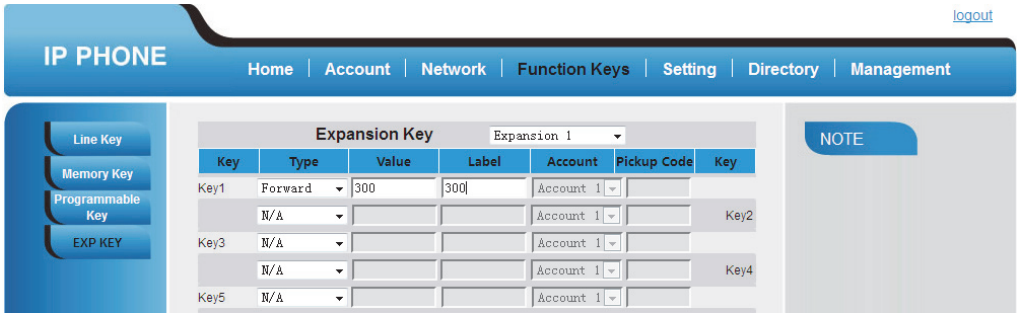

Transfer

You are able to configure the key as a transfer key to perform the Blind/Attended Transfer.

To configure Transfer via Web Interface

1. Click Function keys →EXP Key.
2. Select the desired Key and select Transfer in the Type.
3. Enter the Value with the number that wanted transfer to
4. Enter the Label displayed on LCD.
5. Click the SaveSet to save the configuration.

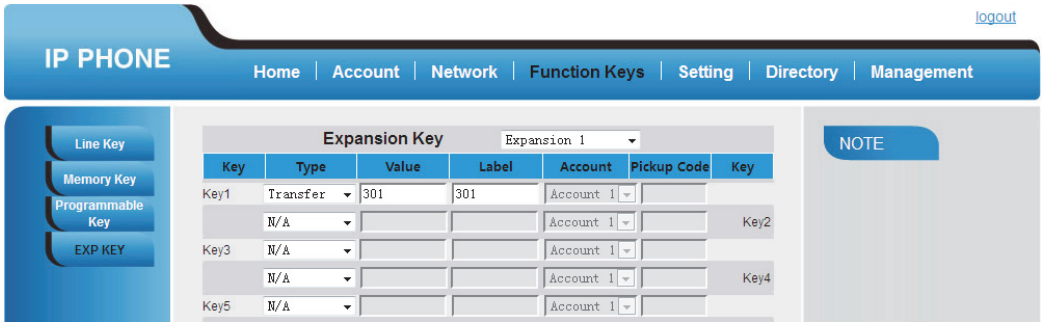

Hold

The key can be configured as a hold key. You can use this key to hold and resume a call during the conversation.

To configure Hold via Web Interface

1. Click Function keys →EXP Key.
2. Select the desired Key and select Hold in the Type.
3. Enter the Label displayed on LCD.
4. Click the SaveSet to save the configuration.

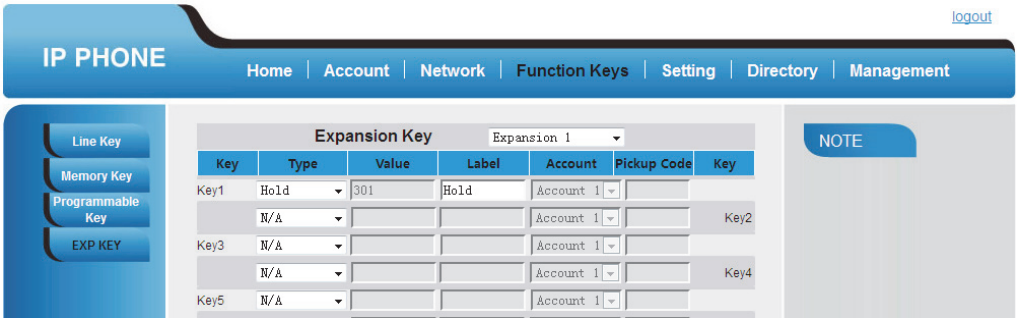
logout
IP PHONE
Home | Account | Network | Function Keys | Setting | Directory | Management
Line Key
Memory Key
Programmable Key
EXP KEY
Expansion Key
Expansion 1
Key | Type | Value | Label | Account | Pickup Code | Key
Key1 | Hold | 301 | Hold | Account 1
N/A | Account 1 | Key2
Key3 | N/A | Account 1
N/A | Account 1 | Key4
Key5 | N/A | Account 1
NOTE

Group Listening

To configure Group listening via Web Interface

1. Click Function keys →EXP Key.
2. Select the desired Key and select Group listening in the Type.
3. Enter the Label displayed on LCD.
4. Click the SaveSet to save the configuration.

DND

If the key is configured as DND key, you are allowed to active the DND function immediately when you press it and the phone is to reject all incoming calls automatically. Press it again to deactivate DND mode.

To configure DND via Web Interface

1. Click Function keys →EXP Key.
2. Select the desired Key and select DND in the Type.
3. Enter the Label displayed on LCD.
4. Click the SaveSet to save the configuration.

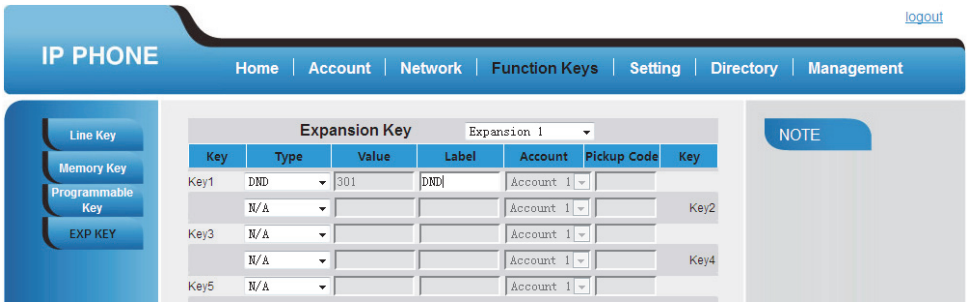
logout
IP PHONE
Home | Account | Network | Function Keys | Setting | Directory | Management
Line Key
Memory Key
Programmable Key
EXP KEY
Expansion Key
Expansion 1
Key | Type | Value | Label | Account | Pickup Code | Key
Key1 DND 301 DND Account 1
N/A Account 1 Key2
Key3 N/A Account 1
N/A Account 1 Key4
Key5 N/A Account 1
NOTE

Redial

If the key is configured as Redial key, you can redial the last placed call from the IP Phone.

To configure Redial via Web Interface

1. Click Function keys →EXP Key.
2. Select the desired Key and select redial in the Type.
3. Enter the Label displayed on LCD.
4. Click the SaveSet to save the configuration.

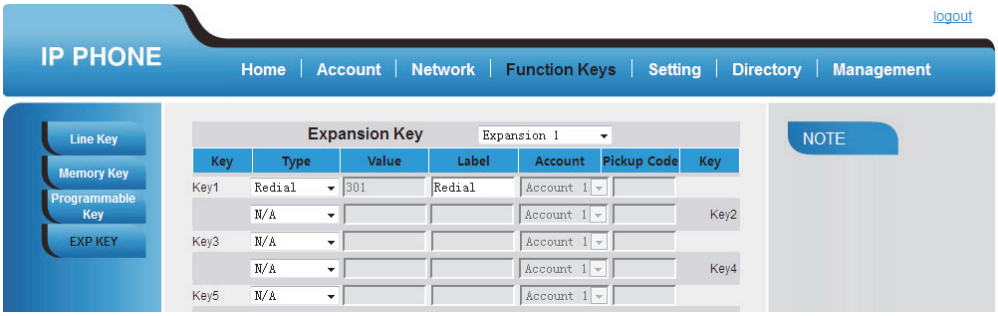
logout
IP PHONE
Home | Account | Network | Function Keys | Setting | Directory | Management
Line Key
Memory Key
Programmable Key
EXP KEY
Expansion Key
Expansion 1
Key | Type | Value | Label | Account | Pickup Code | Key
Key1 Redial 301 Redial Account 1
N/A Account 1 Key2
Key3 N/A Account 1
N/A Account 1 Key4
Key5 N/A Account 1
NOTE

Call Return

When the key is configured as Call Return key you are allowed to dial out the last phone call you received.

To configure Call Return via Web Interface

1. Click Function keys →EXP Key.
2. Select the desired Key and select Call Return in the Type.
3. Enter the Label displayed on LCD.
4. Click the SaveSet to save the configuration.

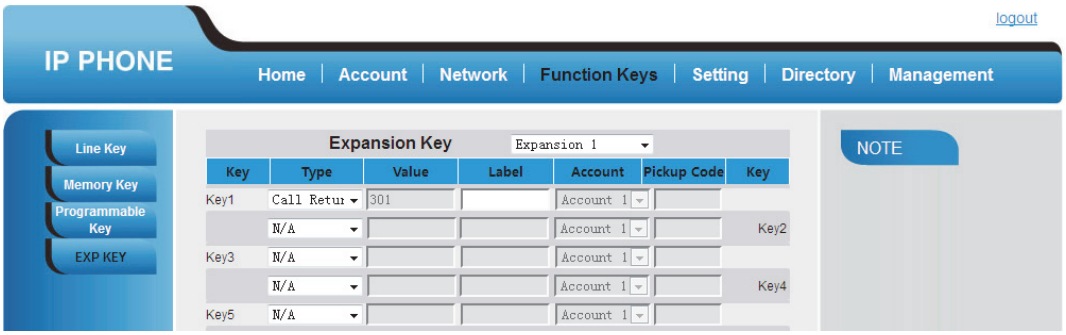
logout
IP PHONE
Home | Account | Network | Function Keys | Setting | Directory | Management
Line Key
Memory Key
Programmable Key
EXP KEY
Expansion Key
Expansion 1
Key | Type | Value | Label | Account | Pickup Code | Key
Key1 | Call Retur | 301 | Account 1
N/A | Account 1 | Key2
Key3 | N/A | Account 1
N/A | Account 1 | Key4
Key5 | N/A | Account 1
NOTE

SMS

To configure SMS via Web Interface

1. Click Function keys →EXP Key.
2. Select the desired Key and select SMS in the Type.
3. Enter the Label.
4. Click the SaveSet to save the configuration.

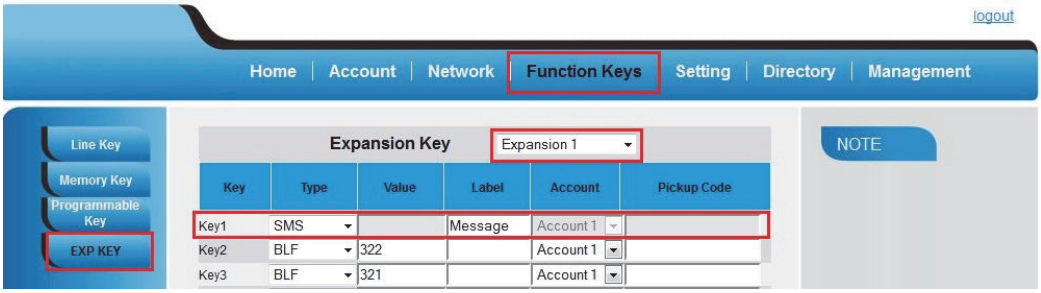
logout
Home | Account | Network | Function Keys | Setting | Directory | Management
Line Key
Memory Key
Programmable Key
EXP KEY
Expansion Key
Expansion 1
Key | Type | Value | Label | Account | Pickup Code
Key1 | SMS | Message | Account 1
Key2 | BLF | 322 | Account 1
Key3 | BLF | 321 | Account 1
NOTE

Record

With record feature, you can record calls by pressing a record key on the phone.

To configure the record via Web Interface

1. Click Function keys → EXP Key.
2. Select the desired Key and select Record in the Type.
3. Enter the Label dispalyed on LCD.
4. Click the SaveSet to save the configuration.

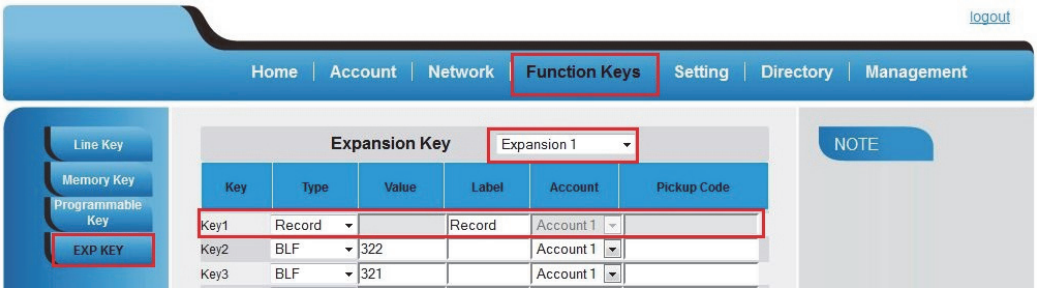

Note:
Please contact the system administrator whether support this feature or not.

Paging

With this feature, you can call a phone or a group directly.

To configure the Paging via Web interface

1. Click Function keys → EXP Key.
2. Select the desired Key and select Paging in the Type.
3. Enter the Paging codes followed by phone number or group number
4. Enter the Label dispalyed on LCD.
5. Click the SaveSet to save the configuration.

Shared Line

This feature allows subscribers to share SIP lines. Moreover it also provides status monitoring of the shared line.

To configure shared line via Web Interface

1. Click Function keys →EXP Key.
2. Select the desired Key and select Shared Line in the Type.
3. Enter the Value.
4. Enter the Label dispalyed on LCD.
5. Select the Account.
6. Click the SaveSet to save the configuration and then restart.

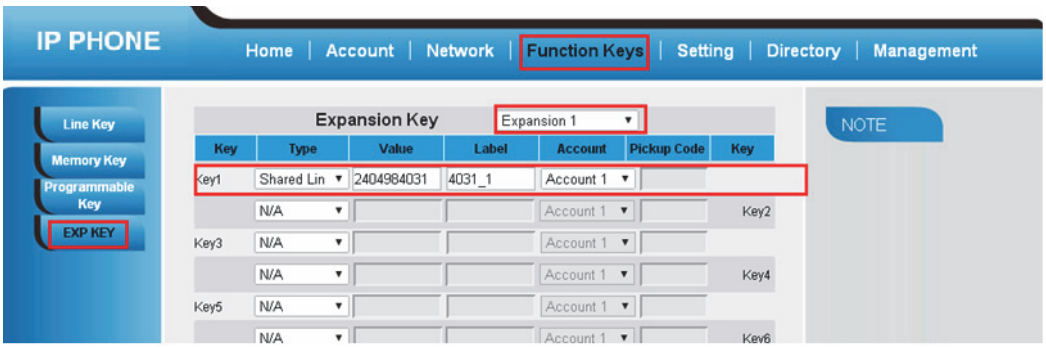

Note:
This feature is not available on all servers. For more information, contact your system administrator.

Public Hold

The key can be configured as a public hold key. During a conversation, all membersbelonging to that particular SLA group can use this key to hold or resume a call.

To configure public hold via Web Interface

1. Click Function keys →EXP Key.
2. Select the desired Key and select public hold in the Type.
3. Enter the Label dispalyed on LCD.
4. Click the SaveSet to save the configuration.

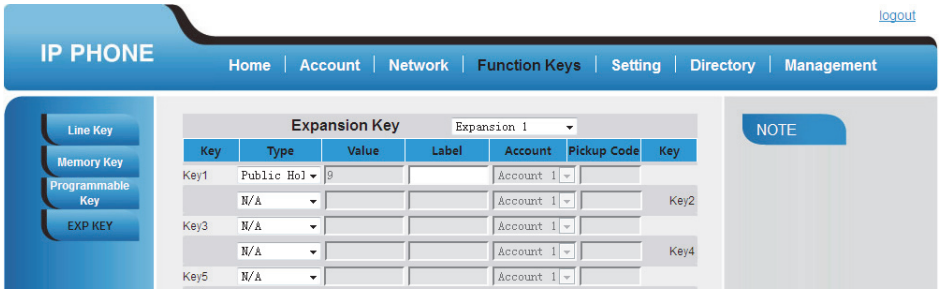

Private Hold

The key can be configured as a private hold key. During a conversation, all members belonging to that particular SLA group can use this key to hold the call, but only the initiator can resume the call.

To configure private hold via Web Interface

1. Click Function keys →EXP Key.

2. Select the desired Key and select public hold in the Type.
3. Enter the Label dispalyed on LCD.
4. Click the SaveSet to save the configuration.

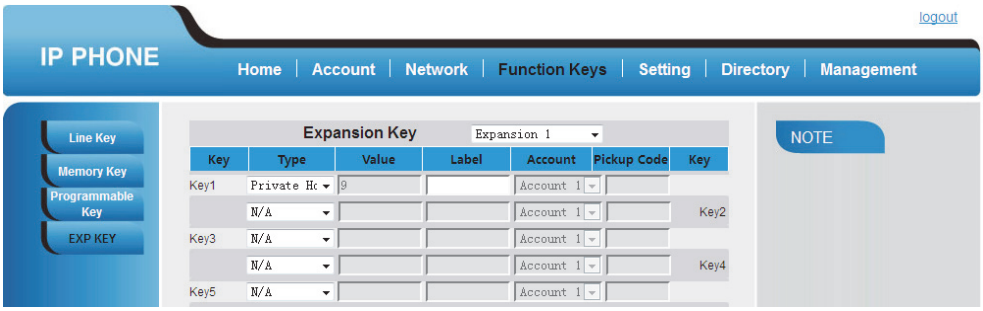

Upgrade

Two ways to upgrade for the Expansion Module

A. Upgrade via IP Phone

1. Connect the expansion module with IP Phone
2. Click Management→ Auto Provison
3. Choose Yes for the Self as Server
4. Put the Expansion module firmware files under the same path of the upgrade for IP Phone, and upgrade via TFTP/FTP/HTTP/HTTPS

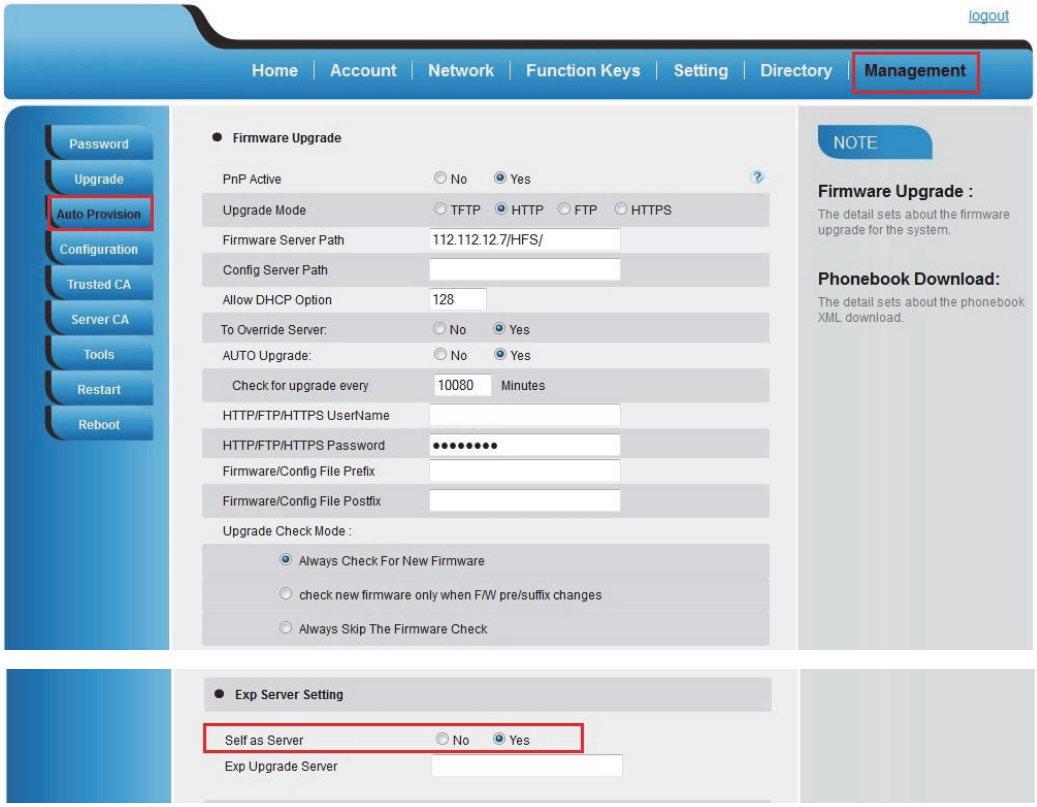

B. Upgrade via Exp upgrade server (Only works for HTTP)

1. Connect the expansion module with IP Phone
2. Click Management→ Auto Provison
3. Choose No for the Self as Server
4. Set the exp upgrade server path: 112.112.xxx.xxx (The http server address must start with 112.112.)
5. Upgrade via HTTP.

Self as Server
No
Yes
Exp Upgrade Server
172.20.21.20

Appendix

Warranty

Your point of contact for warranty obligation benefits is the specialist retailer where you acquired your device. Warranty conditions are based upon the legal regulations of the country in which the device was purchased. Your specialist retailer will be glad to provide more information.

Guarantee

Tiptel provides a voluntary guarantee on the device, the conditions of which are published on http://www.tiptel.com. The guarantee conditions applicable at the time of purchase apply. The original sales slip (receipt, bill) with serial number and/or IMEI number is used as proof of purchase. Please keep these documents in a safe place.

Declaration of conformity

This device satisfies the requirements of the EU directive on radio and telecommunication terminal equipment and the mutual recognition of their conformity. The CE mark on the device confirms conformity with the above directive.
We hereby declare that the device satisfies all fundamental requirements of European directives.
For details on the declaration of conformity please visit http://www.tiptel.com.

Disposal

Packaging: Dispose of card and cardboard boxes in the used paper container and throw plastic parts into a recycling container.
Device disposal: Used electrical devices should not be disposed of in the household waste. Dispose of the device at your local collection points (scrap or recycling yards). Please contact your local authority for information on disposal sites.

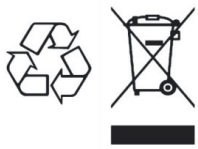

Tiptel.com GmbH
Business Solutions
Halskestraße 1
40880 Ratingen
Deutschland
Tel.: 0900 100–84 78 35*
Vanity Tel.: 0900 100–TIPTEL*
Internet: www.tiptel.de
E-Mail: info@tiptel.com
International: www.tiptel.com
*(1,49 Euro/Min. aus dem Festnetz der Deutschen Telekom, abweichende Mobilfunkpreise möglich)

Tiptel GmbH
Ricoweg 30/B1
2351 Wiener Neudorf
Österreich
Tel.: 02236 677 464-0
Fax: 02236 677 464-22
E-Mail: office@tiptel.at
Internet: www.tiptel.at

Tiptel AG
Bahnstrasse 46
8105 Regensdorf
Schweiz/Suisse/Svizzera
Tel.: 044 843 13 13
Fax: 044 843 13 23
E-Mail: tiptel@tiptel-online.ch
Internet: www.tiptel-online.ch

Tiptel B.V.
Camerastraat 2
1322 BC Almere
Nederlands
Telefoon: 036 53 666 50
Fax: 036 53 678 81
e-mail: info@tiptel.nl
Internet: www.tiptel.nl

Tiptel NV/SA
Imperiastraat 10 B8
1930 Zaventem
Belgique/België
Tel.: 02 714 93 33
Fax: 02 714 93 34
E-Mail: tech@tiptel.be
Internet: www.tiptel.be

Tiptel s.a.r.l.
23, avenue René Duguay-Trouin
78960 Voisins-le-Bretonneux
France
Tél.: 01 39 44 63 30
Fax: 01 30 57 00 29
e-mail: support@tiptel.fr
Internet: www.tiptel.fr

CE

(en) 03/2015